


Heater Transformer Ass'y for 110V (TF-023A) Installation Guide for Semi-Automatic Polypropylene Strapping Machine

General Information


This document is a guide for Heater Transformer Assembly. Listed below are the machines which are compatible to the TF-023A Heater Transformer Ass'y (For 110V) spare part:

- TP-201
- TP-202
- TP-203
- TP-202L
- TP-201CE
- TP-202CE
- TP-203CE
- TP-202LCE
- TP-201YS

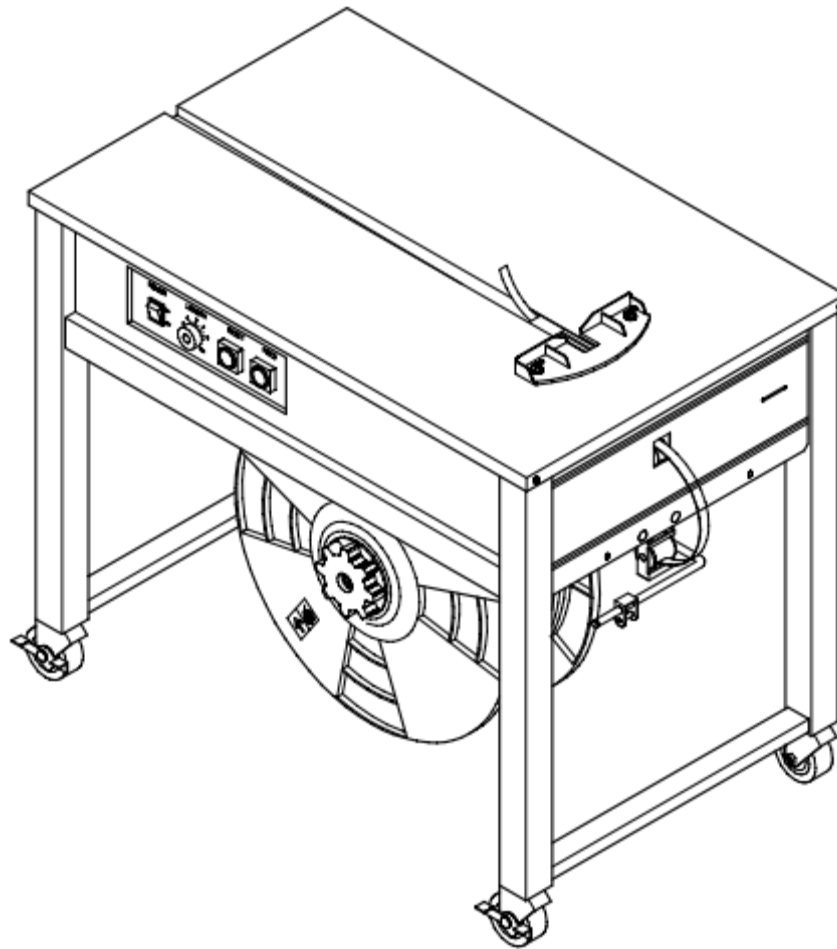


Spare Parts Assembly

TF-023A Heater Transformer Ass'y (For 110V) is part for the Semi- Automatic Polypropylene Strapping Machine. The Heater Transformer Ass'y (For 110V) is connected to the following spare parts:

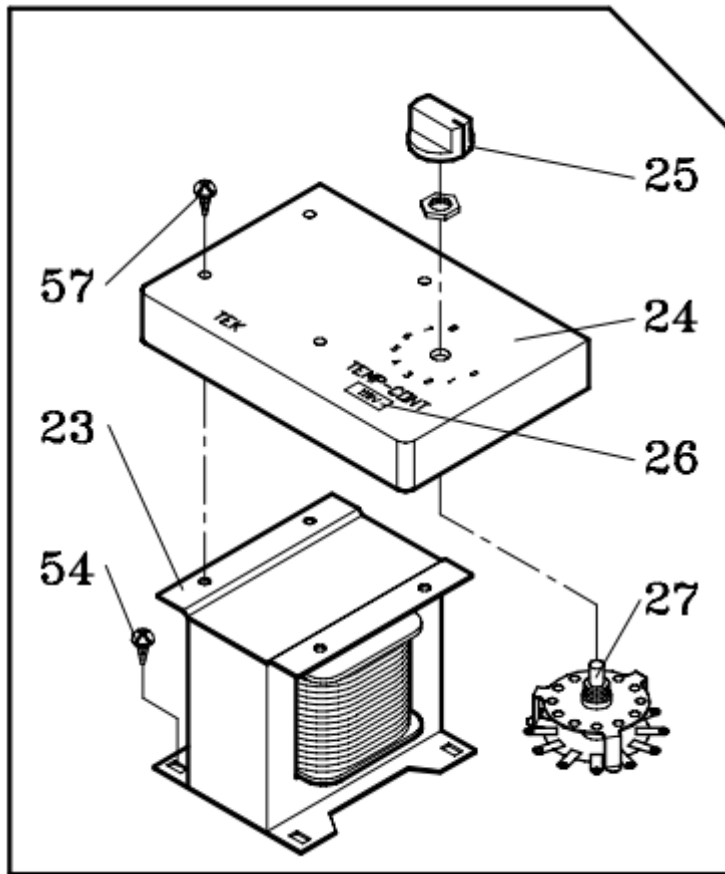

- 25 – Knob
- 24 – Transformer Cover
- 26 – Name Label
- 27 – Selector Switch
- 57 – PMS, M4x10
- 23 – Heater Transformer (For 110V)
- 54 – TMS, M4x8


The TF-023A Heater Transformer Ass'y (For 110V) is installed inside the machine assembly. It is placed beside the Terminal Bracket (TF-015) Assembly and Earth Plate (5P) (For CE) (Option) (T5-4-10310). The TF-023A is composed of the following parts: Knob (TF-025), Transformer Cover (TF-024), Name Label (LA-50014), Selector Switch (TF-027), Heater Transformer (TF-023/TF-023-1), TMS, M4x8 (TMS0408) and PMS, M4x10 (PMS0410).

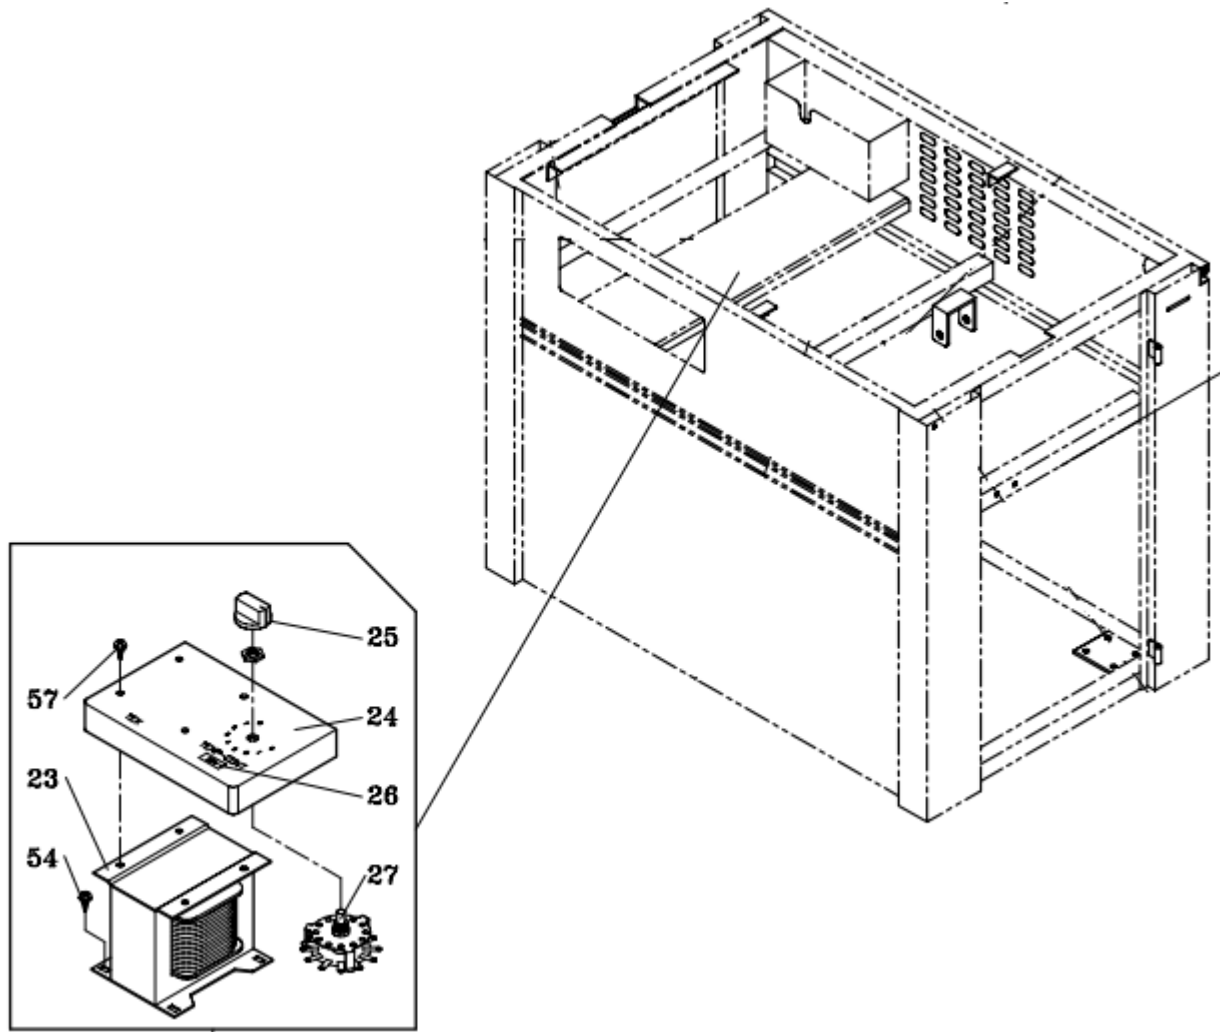

Heater Transformer Assembly

[Disclaimer: It is not the responsibility of HBC/STEP for the service you perform and the choice and securing of skills needed by person doing the service.]

Images

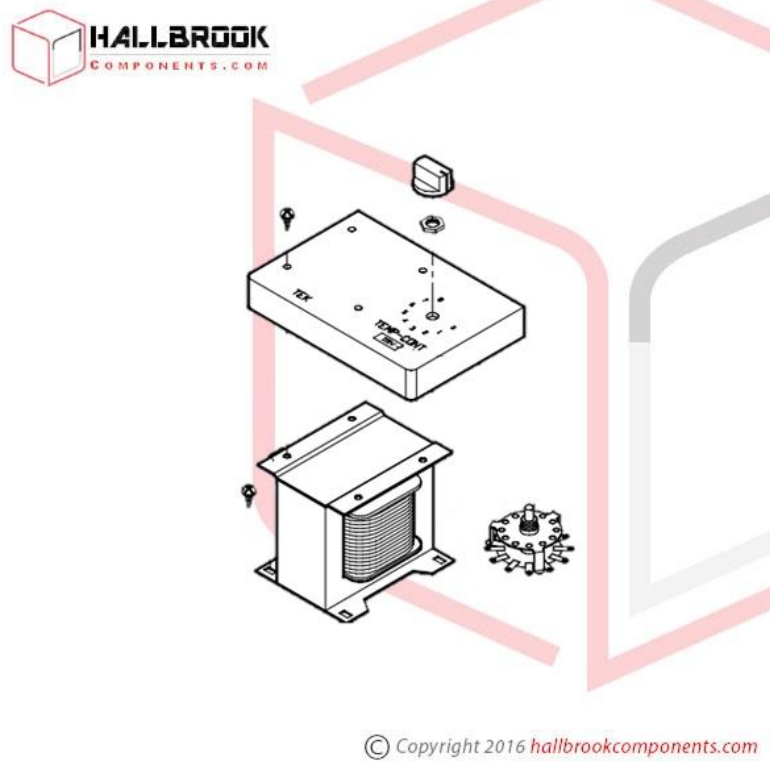

[TF-023A Heater Transformer Ass'y (For 110V) Drawing]



[Actual Image]