

Round Belt (TB-143) Installation Guide for STEP TP – 202CE1 Semi Auto Strapping Machine Genesis Series

General Information:

This is an installation guide for replacing Round Belt in this machine. Listed below are the machines that are noted as Genesis series compatible for the Round Belt spare part that has been purchased.

- 1. STEP TP – 202CE1**
- 2. STEP TP – 202L**
- 3. STEP TP – 203**
- 4. STEP TP – 502MH**
- 5. STEP TP – 502MHB**
- 6. STEP TP – 502MV**
- 7. STEP TP – 502MVB**

Spare Parts that are part of the Bracket Assembly, where TB-143 Round belt is connected.

TB – 175

TB – 176 (2 Pcs)

RR32

BR6002ZZ

TB – 170

TB – 143

TB – 175A

TB – 224 (2pcs)

TB – 154


TB – 155

HBSS0606G

TB – 225


Isometric View of Machine

TB – 143 is located inside the Body Frame of STEP 202CE

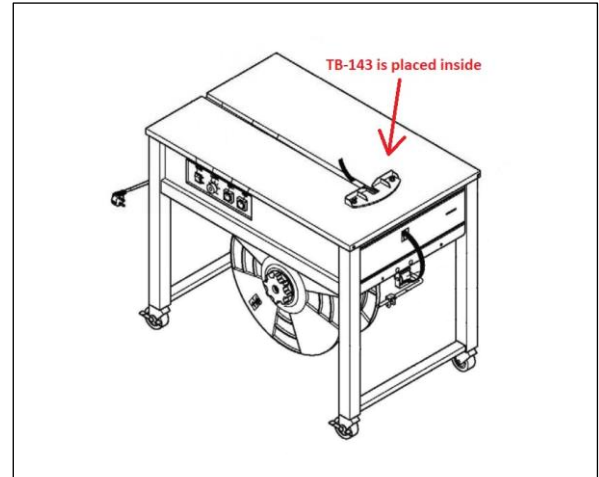


View of the Machine being Opened Up


The Round Belt is placed among the parts that are placed on TC-002 (Bracket)

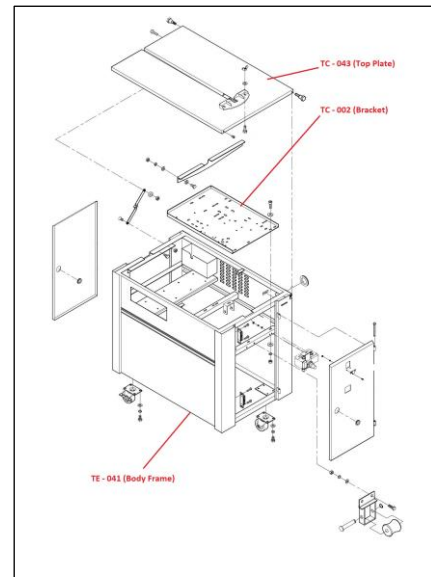

TB – 143 is among the parts that make up the Strapping Head which is among the parts that make up the Bracket Assy.

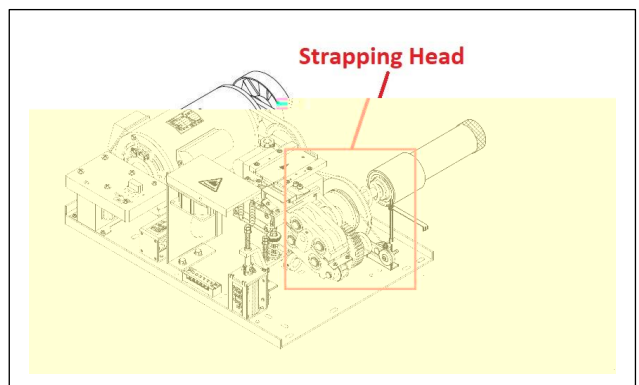

TB-143 (Round Belt) is connected by TB-175A (Plate) and TB-139 (not shown) for both ends, it is in between parts TB-176 and TB-224 (see illustration for parts that make up the Bracket System)

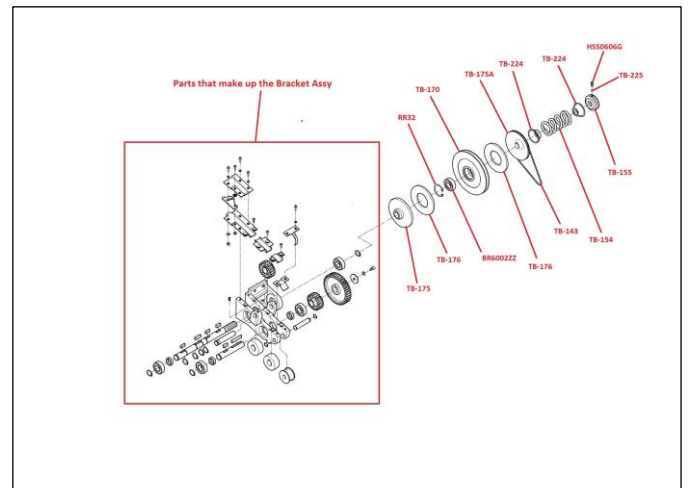

Actual image of TB-143

