


Heater Guide (M7-1-201400) Installation Guide for Automatic Strapping Machine

General Information


This document is a guide for Strap Guide Assembly. Listed below are the machines which are compatible to the M7-1-201400 Strap Guide spare part:

- TP-702-59
- TP-702B
- TP-702BP

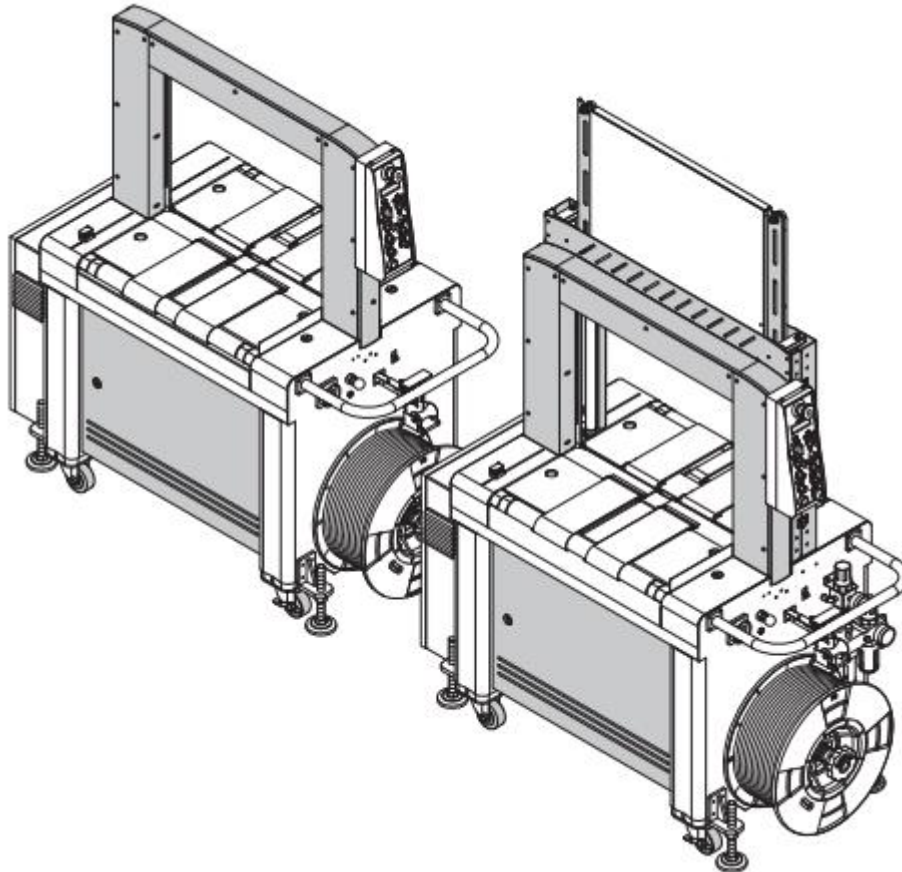



Spare Parts Assembly

M7-1-201400 Strap Guide is a part for the Automatic Strapping Machine. The Strap Guide is connected to the following spare parts:

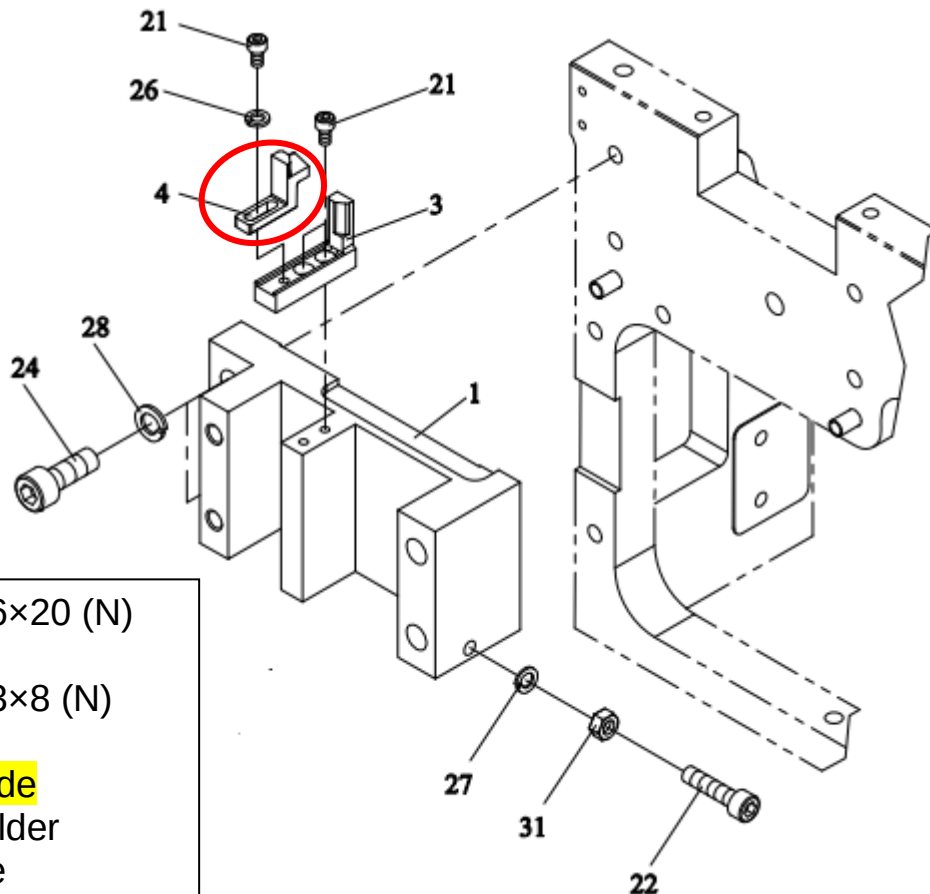


- 24 – HBS, M6×20 (N)
- 28 – SW, M6
- 21 – HBS, M3×8 (N)
- 26 – SW, M3
- 4 – Strap Guide**
- 3 – Cutter Holder
- 1 – Bar Guide
- 27 – SW, M5
- 31 – HN, M5
- 22 – HBS, M5×20 (N)

M7-1-201400 Strap Guide is installed and placed inside the Bar Guide Group (M7-1-200000). It is placed on top of the Cutter Holder (M7-1-201300/M7-1-201300S) and held by HBS, M3×8 (N) (HBS0308N) and SW, M3 (SW03). Using hexagonal screwdriver will loosen or tighten strap guide and will firmly be mounted on the bar guide so function and strapping is secure and tension adjustment and cutting is possible.

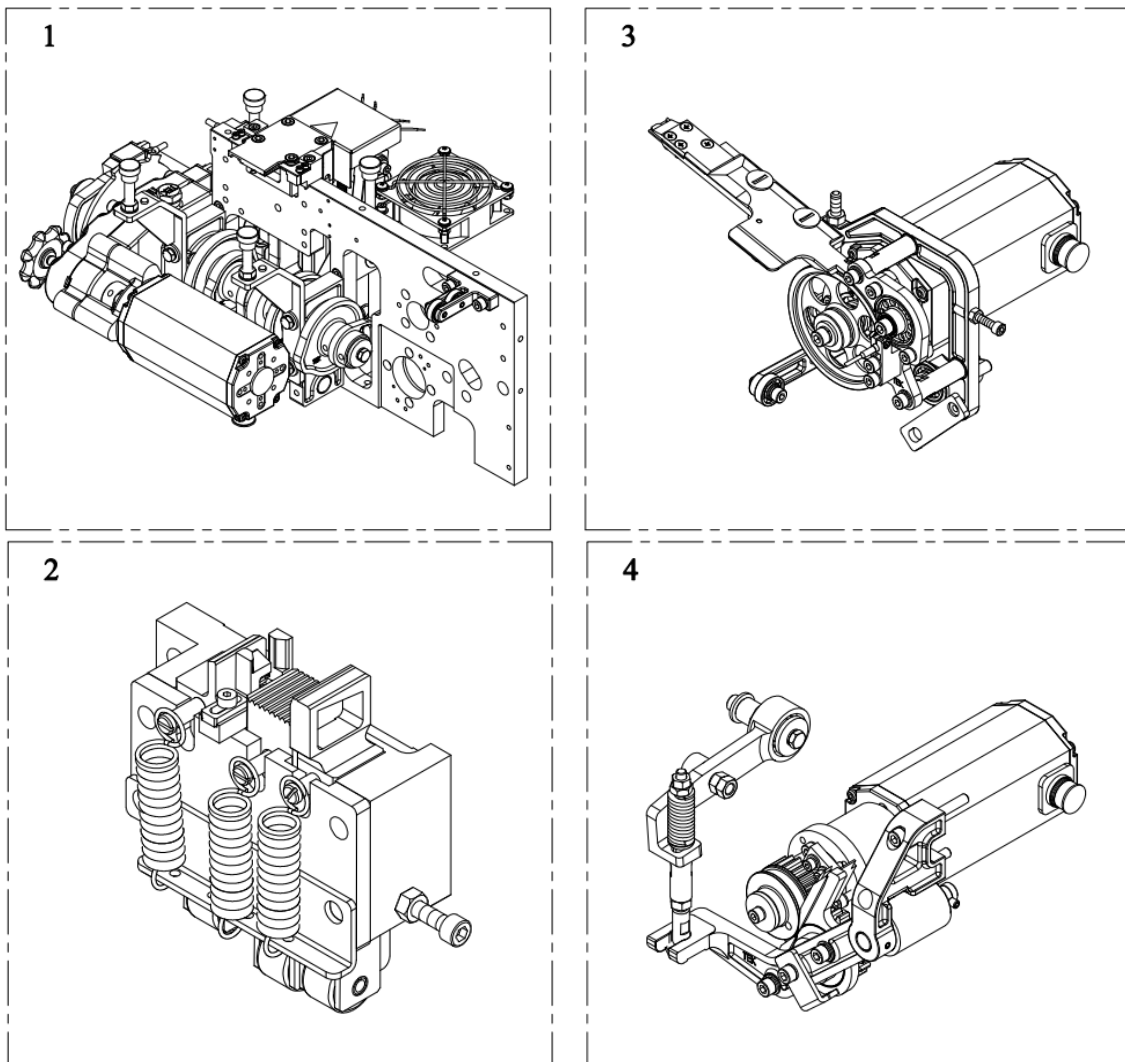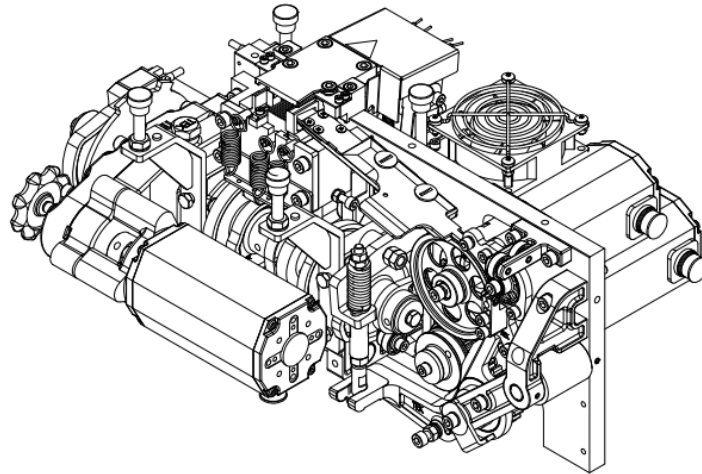

- 1 – Cam Group
- 2 – Bar Guide Group
- 3 – Feed Group
- 4 – Tension Group

Images

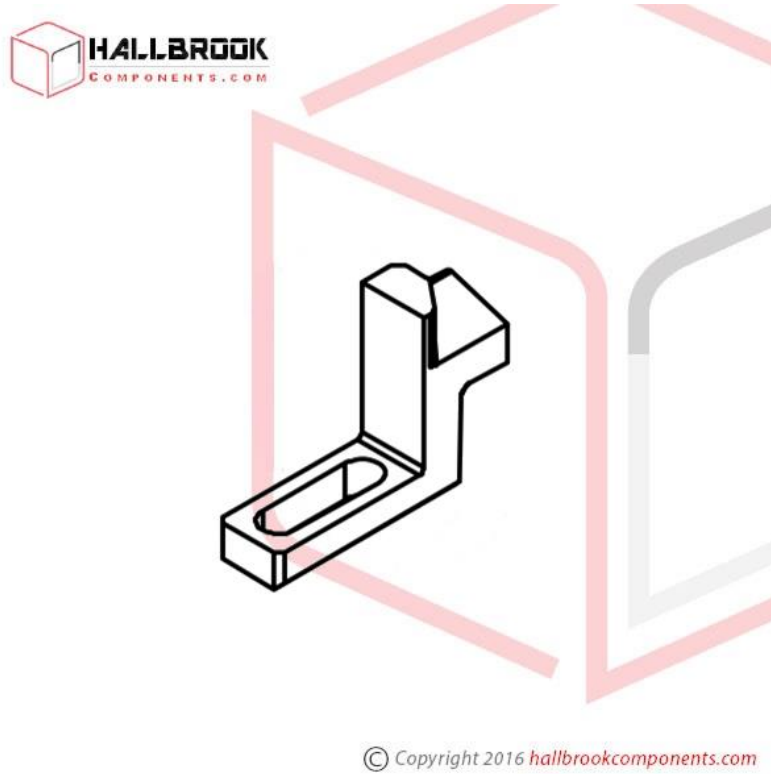

[M7-1-201400 Strap Guide Drawing]

[Actual Image]