

Gripper Screw (H21-019) Installation Guide for Strapping Tensioner (for Cord Strap)

General Information

This document is a guide for Gripper Screw. Listed below are the machines which are compatible to the H21-019 Gripper Screw spare part:


- H-21
- H-22
- H-23
- H-25



Spare Parts Assembly

H21-019 Gripper Screw is part for the Tensioner for cord strap. The Gripper Screw is connected to the following spare parts:

- 4 – Needle Bearing, 1010 (H-25)
Bushing (H-22)
- 15 – Gripper
- 17 – Gripper Spring
- 18 – Gripper Plate
- 19 – Gripper Screw**

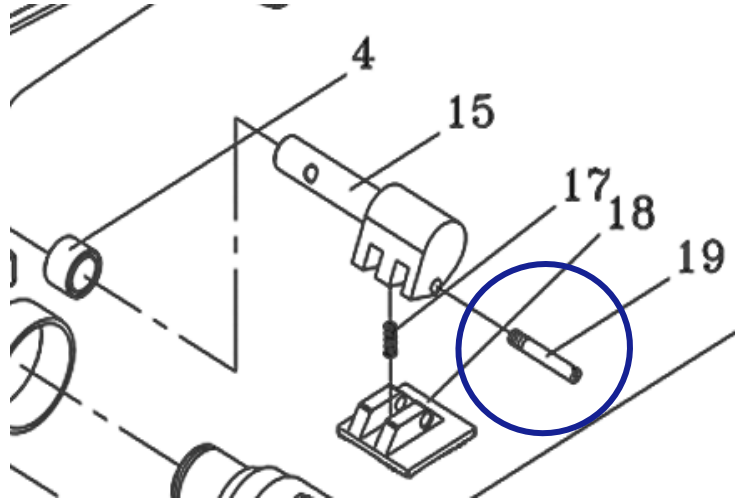

The H21-019 Gripper Screw is installed to H21-015/H25-015 (Gripper) to secure H22-018/H25-018 (Gripper Plate) and H21-017 (Gripper Spring) altogether.

Images



[H21-019 Gripper Screw Drawing]



[Actual Image]