Salbæk Technology Group
support@sal-tech.com
Skype: easy.packaging


PC Board (T2-6-30250) Installation Guide for Semi-Automatic Polypropylene Strapping Machine

© Copyright 2020 Salbæk Technology Group

General Information

This document is a guide for PC Board Assembly. Listed below are the machines which are compatible to the T2-6-30250 PC Board spare part:

- TP-201
- TP-202
- TP-203
- TP-202L
- TP-201CE
- TP-202CE
- TP-203CE
- TP-202LCE
- TP-201YS

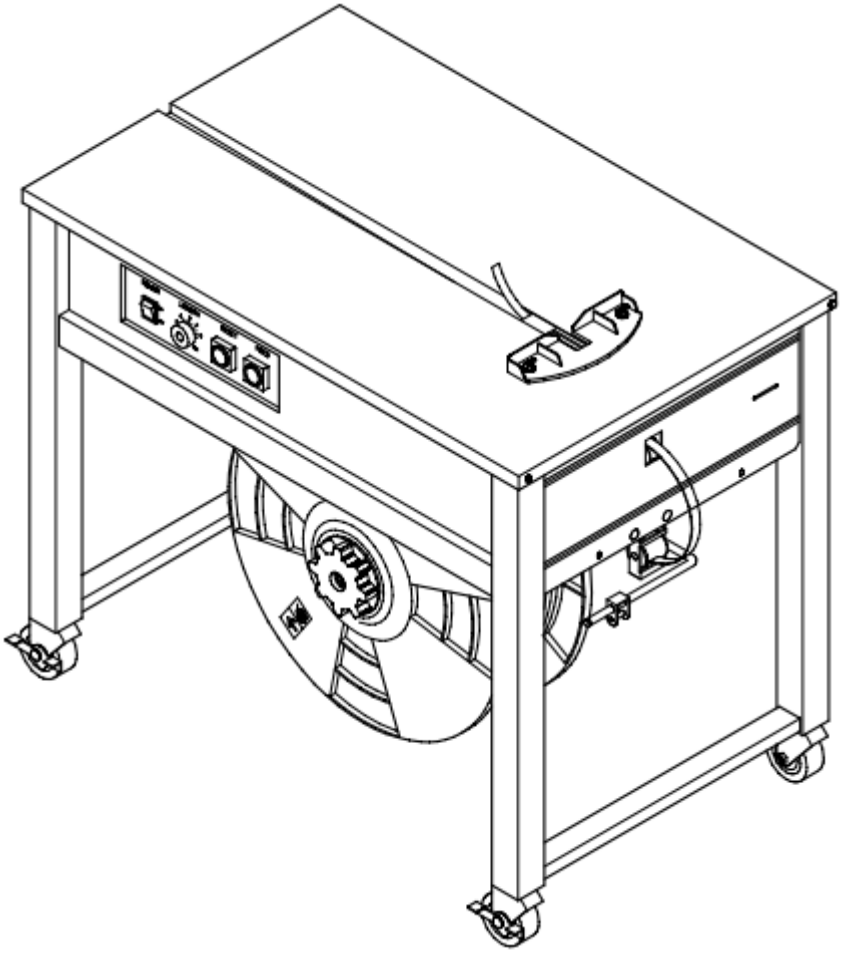


© Copyright 2020 Salbæk Technology Group

Spare Parts Assembly

T2-6-30250 PC Board is part for the Semi- Automatic Polypropylene Strapping Machine. The PC Board is connected to the following spare parts:

25 – Label
51 – TMS, M4x8
34 – Cover
7 – PC Board
53 – TMS, M3x12
8 – PC Board Receptacle
6 – Control Panel
12 – Knob
13 – Fuse Holder
14 – Fuse
30 – Name Plate
9 – Base
2 – Variable Resistor (1MΩ)
16 – Bolt
64 – SW, M3
15 – Transformer
63 – PMS, M4x8

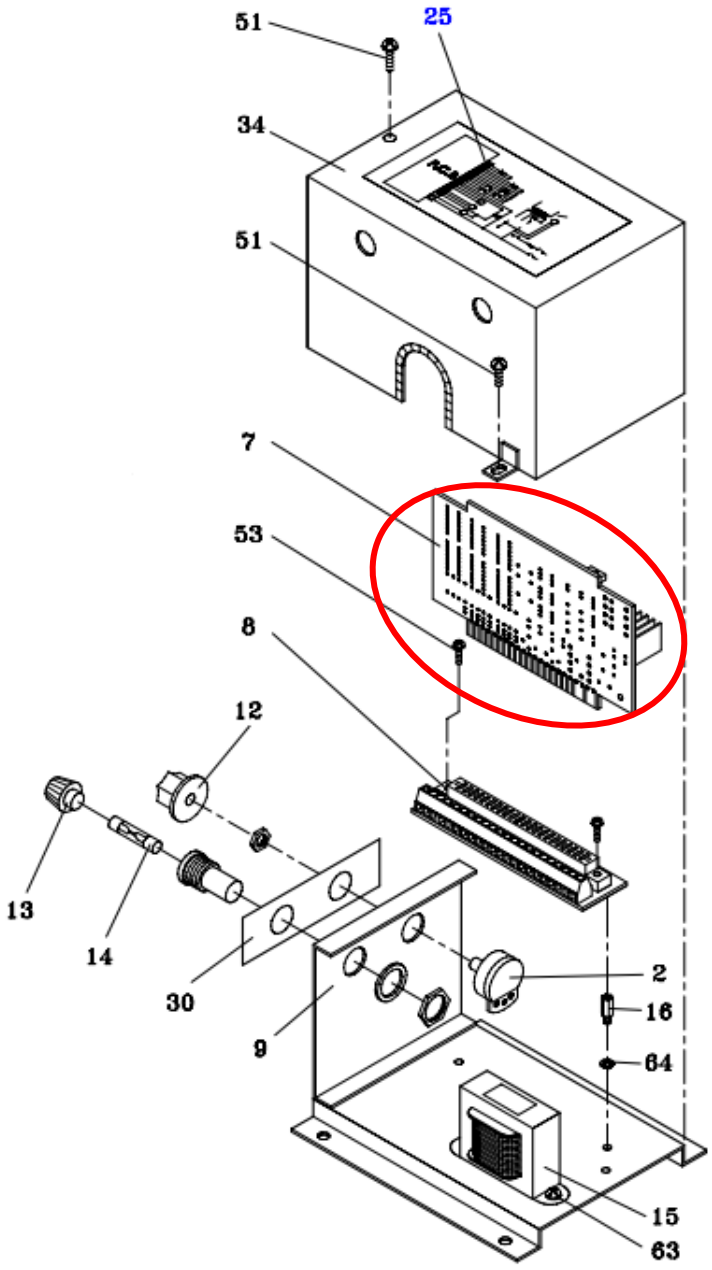


The T2-6-30250 PC Board controls all the functions of the machine. It can be found in the Control Unit of the machine. To install/replace the PCB, first unscrew the TMS, M4x8 (TMS0408) from the Cover (TG-034). Gently remove the PCB (T2-6-30250) from the PCB Receptacle (TG-008).


[Disclaimer: It is not the responsibility of HBC/STEP for the service you perform and the choice and securing of skills needed by person doing the service.]

© Copyright 2020 Salbæk Technology Group

Images

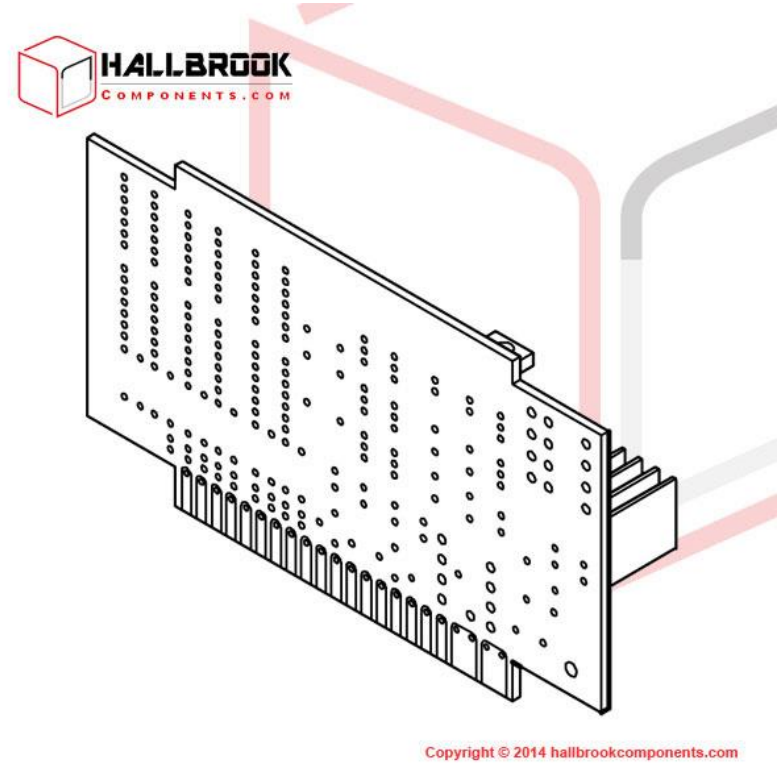

[T2-6-30250 P.C. Board Drawing]

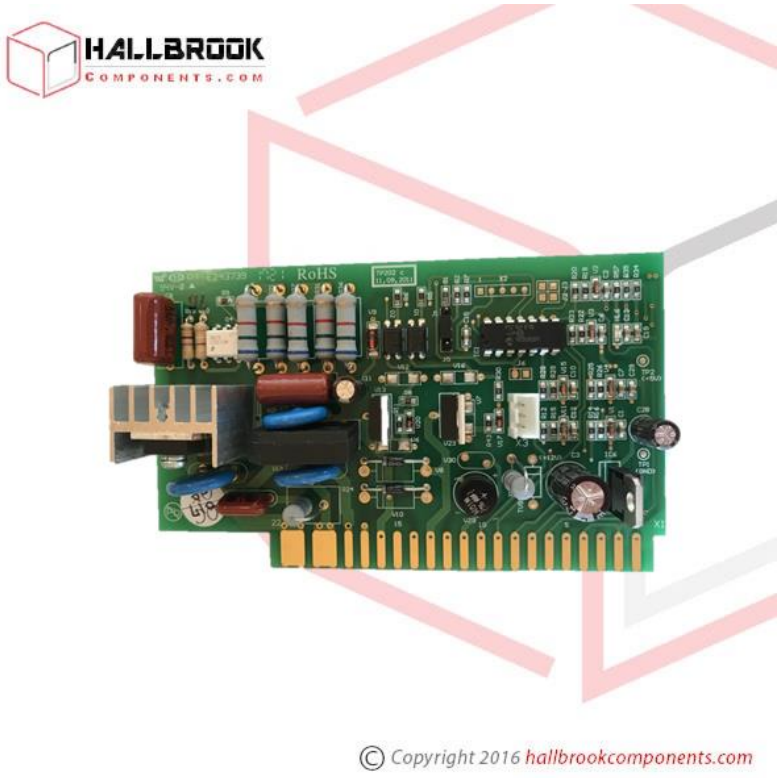

[Actual Image]