Salbæk Technology Group
support@sal-tech.com
Skype: easy.packaging


Front Bar (TA-079) Installation Guide for Semi-Automatic Polypropylene Strapping Machine

© Copyright 2020 Salbæk Technology Group

General Information

This document is a guide for Front Bar Assembly. Listed below are the machines which are compatible to the TA-079 Front Bar spare part:


- TP-201
- TP-202
- TP-203
- TP-202L
- TP-201CE
- TP-202CE
- TP-203CE
- TP-202LCE
- TP-201YS

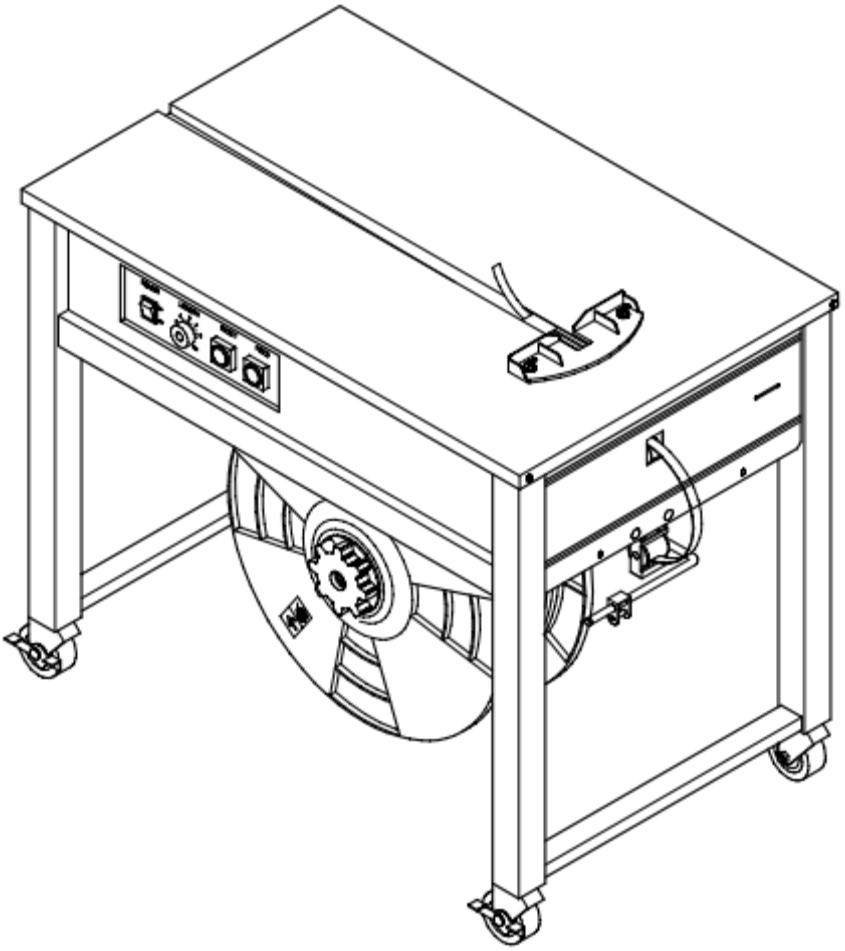

© Copyright 2020 Salbæk Technology Group

Spare Parts Assembly

TA-079 Front Bar is part for the Semi- Automatic Polypropylene Strapping Machine. The Front Bar is connected to the following spare parts:

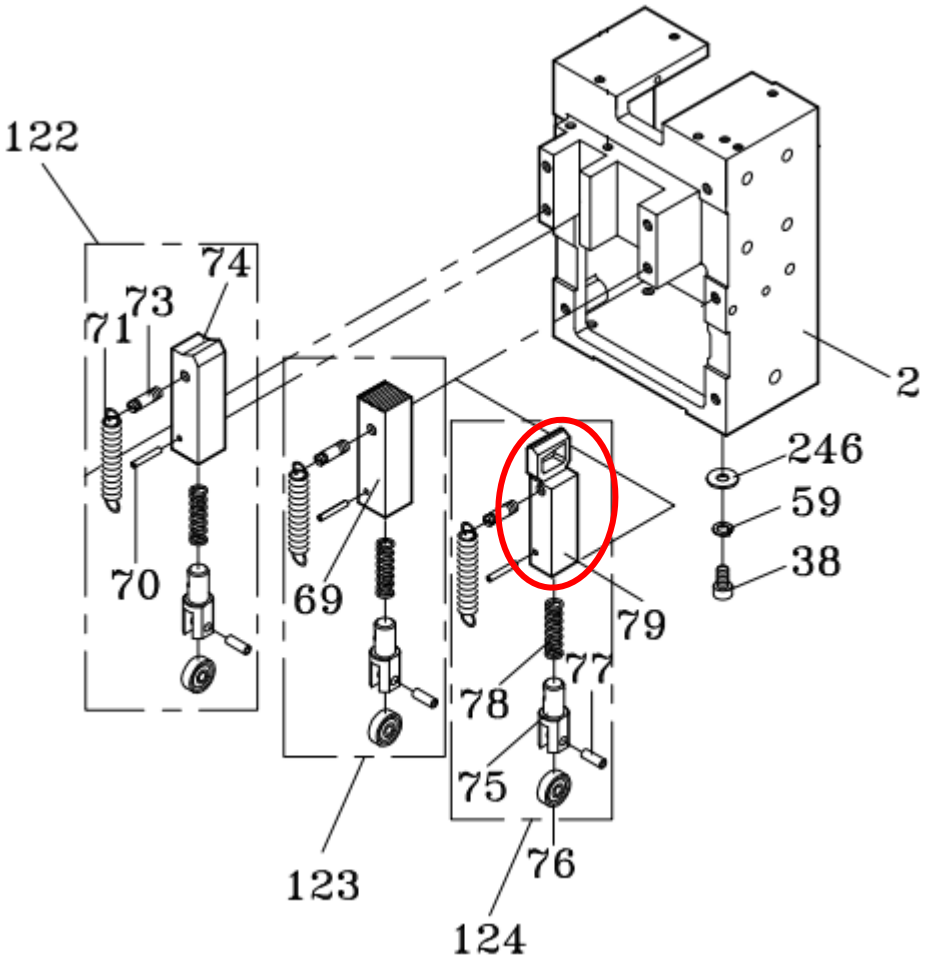


2 – Main Body Block
246 – PW, M6 (C)
59 – SW, M6
38 – HBS, M6x16
79 – Front Bar
77 – Spring Pin, 5x14
78 – Spring
75 – Plunger
76 – Bearing, 635ZZ
124 – Front Bar Ass'y
69 – Press Bar
123 – Press Bar Ass'y
122 – Rear Bar Ass'y
74 – Rear Bar
73 – Spring Hook
71 – Return Spring
70 – Spring Pin, 3x18

The TA-079 Front Bar is installed inside the machine assembly. It is part of the Front Bar Ass'y (T5-1-15000) which is found in the Main Body Block (T5-1-10110). To remove and replace the Front Bar, dettach the Front Bar Ass'y (T5-1-15000) from the Main Body Block (T5-1-10110). Remove the Spring (TA-078), Plunger (TA-075) and Bearing, 635ZZ (BR635ZZ). In installing the Front Bar (TA-079), properly attach the spring, plunger and bearing. Gently slid the Front Bar Ass'y to the Main Body Block.

[Disclaimer: It is not the responsibility of HBC/STEP for the service you perform and the choice and securing of skills needed by person doing the service.]

© Copyright 2020 Salbæk Technology Group

Images

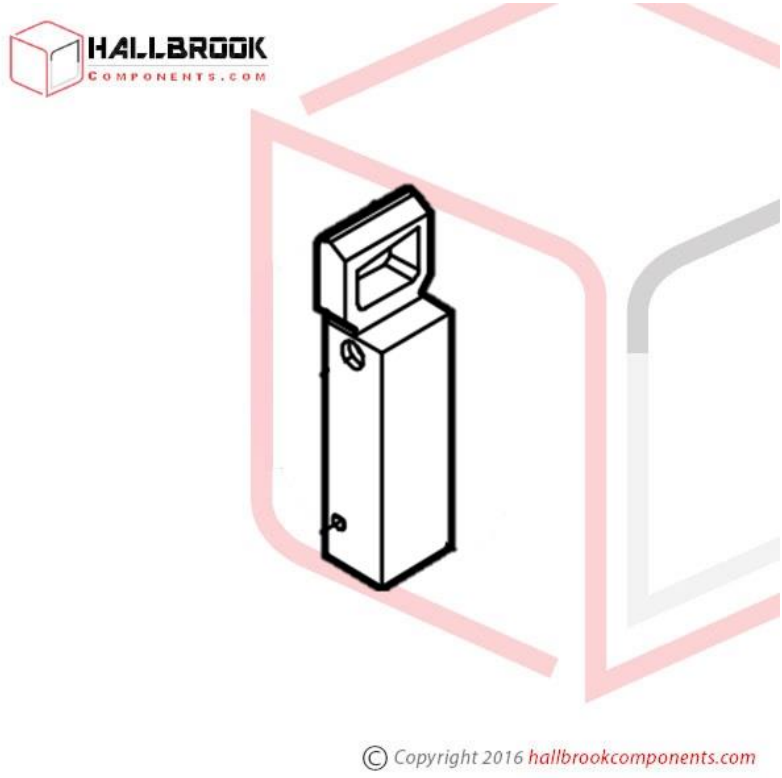

[TA-079 Front Bar Drawing]



[Actual Image]

© Copyright 2020 Salbæk Technology Group