Salbæk Technology Group
support@sal-tech.com
Skype: easy.packaging


Heater Transformer Ass'y for 110V (T6-6-10172) Installation Guide for Automatic Polypropylene Strapping Machine

© Copyright 2020 Salbæk Technology Group

General Information

This document is a guide for Heater Transformer Assembly (For 110V). Listed below are the machines which are compatible to the T6-6-10172 Heater Transformer Ass'y (For 110V) spare part:


- TP-601D1
- TP-601D3
- TP-601L1
- TP-601L3
- TP-6000-1
- TP-6000CE1
- TP-6000-3
- TP-6000CE3

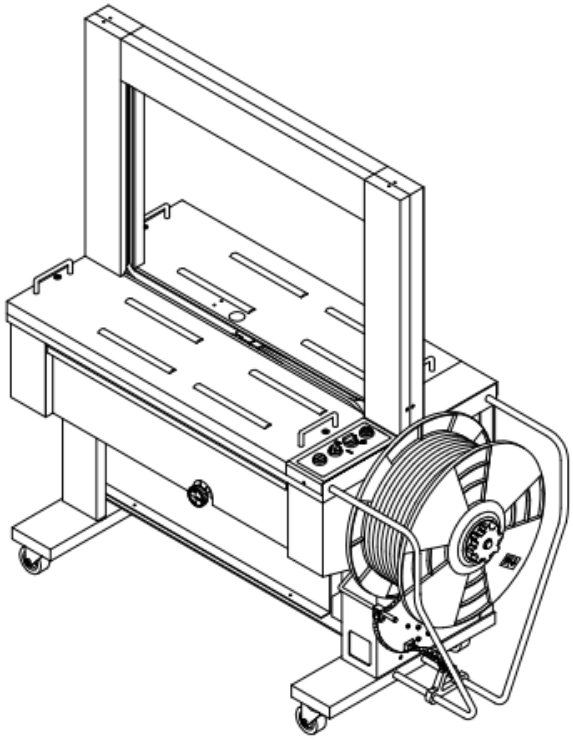

© Copyright 2020 Salbæk Technology Group

Spare Parts Assembly

T6-6-10172 Heater Transformer Ass'y (For 110V) is a part for the Automatic Polypropylene Strapping Machine. The Heater Transformer Ass'y is consist of the following spare parts:

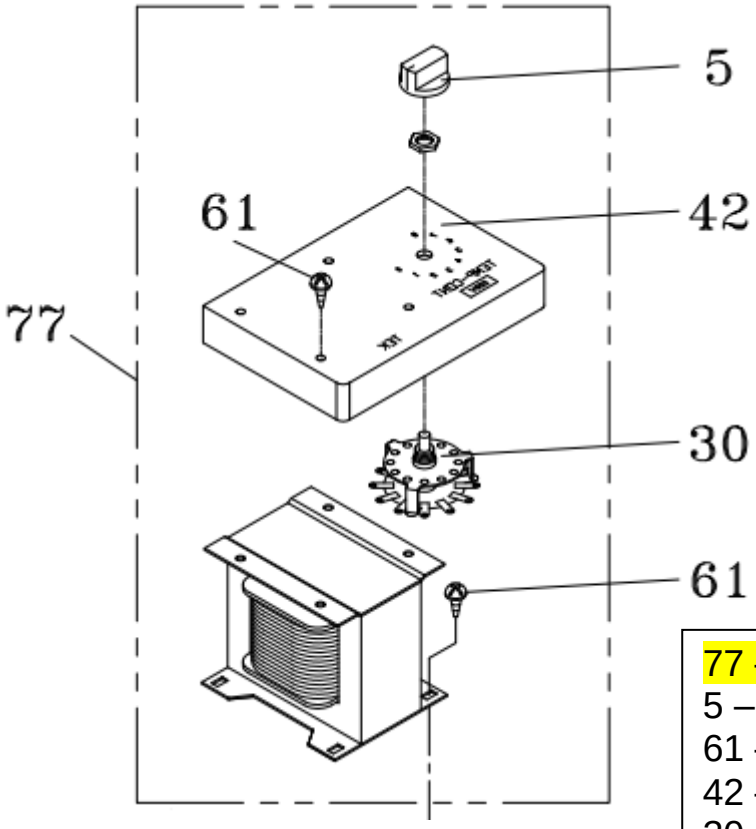


77 – Heater Transformer Ass'y (For 110V)
5 – Knob
61 – TMS, M4×8
42 – Transformer Cover
30 – Selector Switch

T6-6-10172 Heater Transformer Ass'y (For 110V) is installed and placed inside the Electronic Group. To replace the Heater Transformer Ass'y, start with taking out the Transformer Box Cover of the machine. Remove the screws and gently slid off the Heater Transformer Ass'y. In installing the part, do not forget to properly attach the screws to the assembly.

When the Heater Transformer Ass'y is defective, it would cause no power for heating up. This would not melt strap because the temperature is low.

© Copyright 2020 Salbæk Technology Group

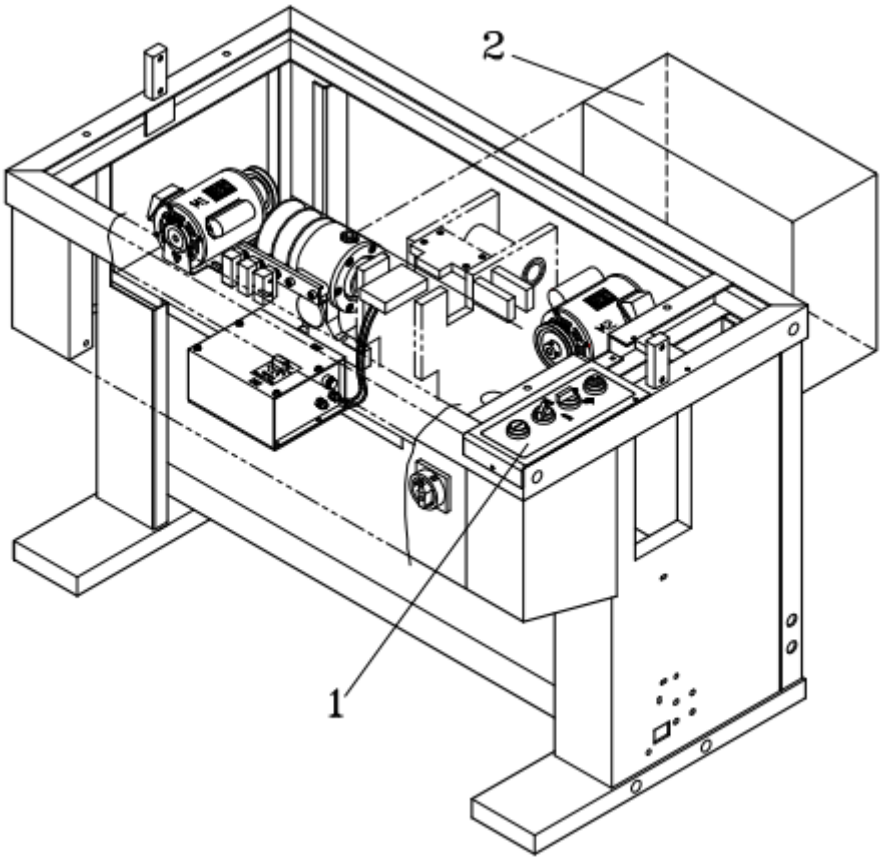


1 – Electric Control Group
2 – Electric Box Group


[Disclaimer: It is not the responsibility of HBC/STEP for the service you perform and the choice and securing of skills needed by person doing the service.]

© Copyright 2020 Salbæk Technology Group

Images

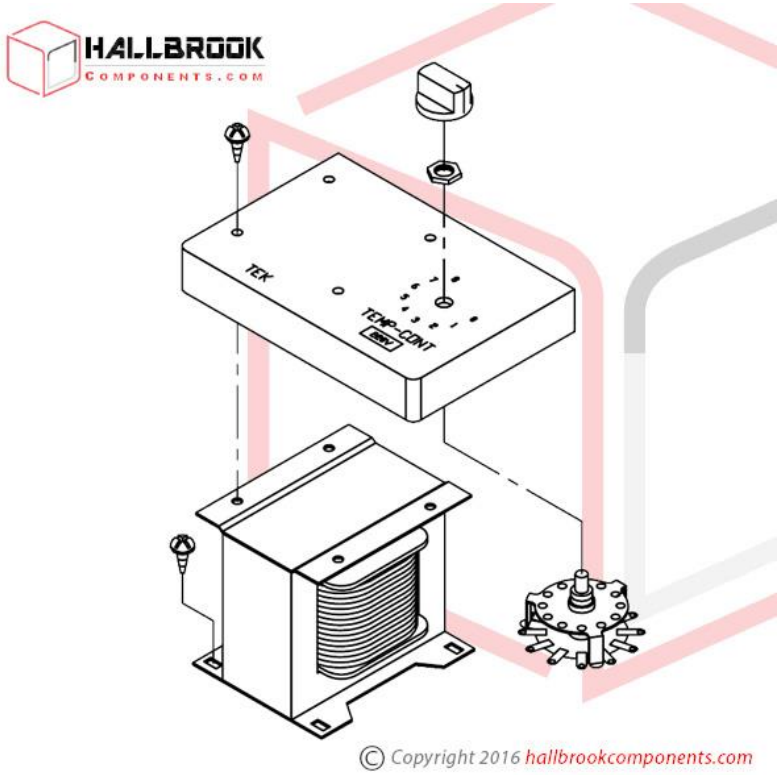

[T6-6-10172 Heater Transformer Ass'y for 110V Drawing]

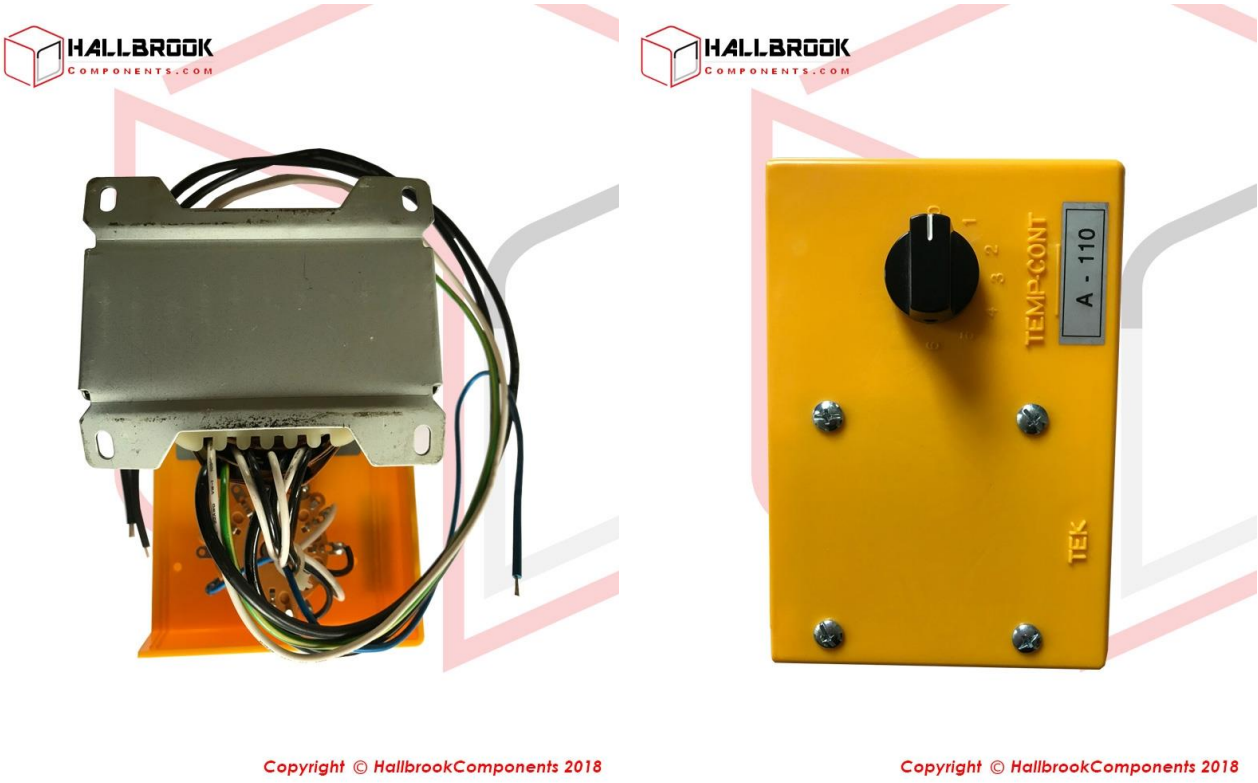

[Actual Image]