Hallbrookcomponents.com
Salbæk Technology Group
support@sal-tech.com
Skype: easy.packaging


Main Spring (H21-028) Installation Guide for Strapping Tensioner (for Cord Strap)

© Copyright 2020 Salbæk Technology Group

General Information

This document is a guide for Main Spring. Listed below are the machines which are compatible to the H21-028 Main Spring spare part:


- H-21
- H-22
- H-23
- H-25

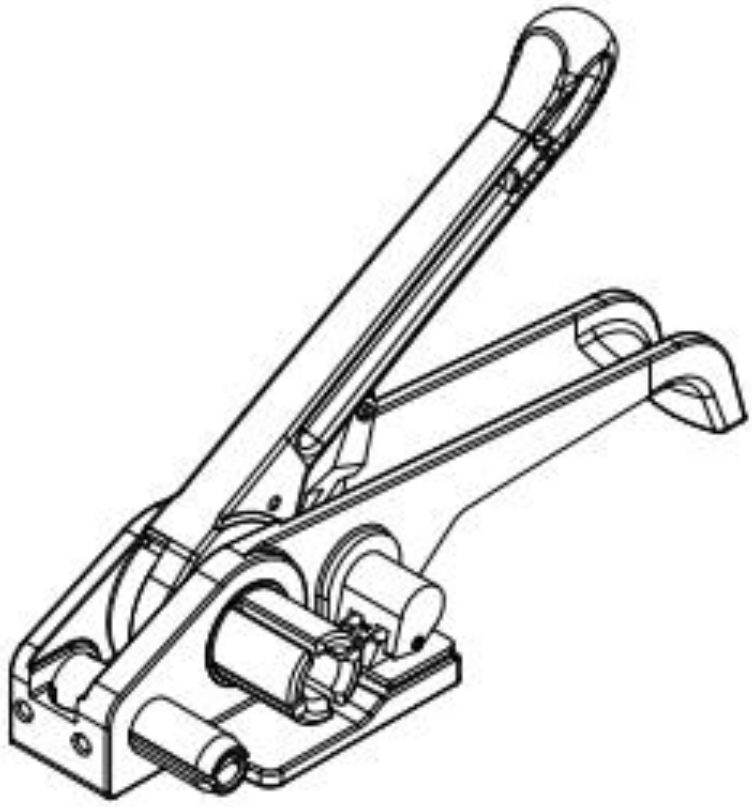

© Copyright 2020 Salbæk Technology Group

Spare Parts Assembly

The H21-028 Main Spring is part for the Tensioner cord strap. The Main Spring is connected to the following spare parts:

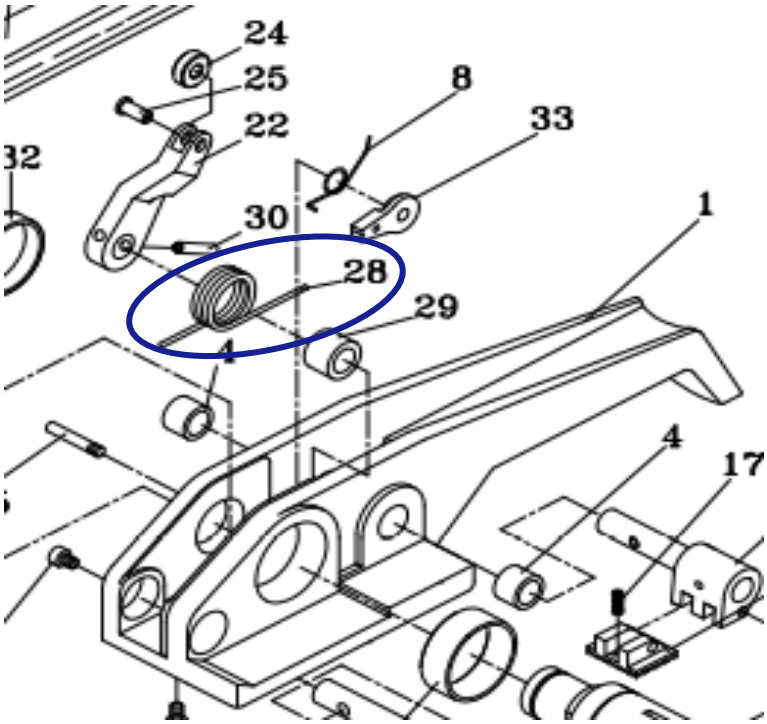

1 – Base
4 – Needle Bearing, 1010 (H-25)
Bushing (H-22)
22 – Releasing Lever
24 – Releasing Lever Roller
25 – Releasing Lever Shaft
28 – Main Spring
29 – Main Spring Bushing
30 – Spring Pin, 4x20

Inside the Main Spring the H21-029 Main Spring Bushing is placed which is connected to the H21-022 Releasing Lever and secured by TAL1010 Needle Bearing, 1010 (H-25) / H21-004 Bushing (H-22).

Images



[H21-028 Main Spring Drawing]

[Actual Image]

© Copyright 2020 Salbæk Technology Group